Applied Thermal Control Ltd

39 Hayhill Industrial Estate Barrow upon Soar, Leicestershire LE12 8LD, United Kingdom

UPDATED GUIDANCE USE OF TAP WATER IN ATC CHILLERS



Date 12/06/2024 Page 1

Earlier documentation may have indicated that the use of tap water in ATC chillers was permissible under certain conditions. Based on further evaluation and our ongoing commitment to system reliability, we now advise against the use of tap water in any ATC chiller models. This updated recommendation reflects a more comprehensive understanding of global water quality variation.

WHY THIS MATTERS

Water quality can vary widely by region and application. Tap water may contain:

- High mineral content (e.g. calcium, magnesium)
- pH imbalance
- Biological matter (e.g. algae, bacteria)
- Chemical additives (e.g. chlorine, fluoride)

These factors can contribute to:

- Internal corrosion
- Degradation of seals and materials
- Biological fouling
- Reduced heat transfer performance

As such, continued use of unapproved fluids, including untreated tap water, may affect long-term performance in some instances.

CURRENT RECOMMENDATION

To support the ongoing reliability and efficiency of ATC chillers, we recommend using only ATC-approved fluids.

PREFFERED FLUID

Hexid - Providing corrosion protection, freeze protection, algae inhibition, and effective thermal performance.

If Hexid is not available in your region, please contact ATC for guidance.

SUPPORT

For questions regarding coolant compatibility or fluid selection for your specific system, please contact ATC Technical Support.



Installation, Operation & Service Manual **A03**

DOCUMENT DETAILS







Installation, Operation & Service Manual A03

\boldsymbol{a}	\sim 11	1.7		п	ETA	u e
		1111	<i>u</i> .		J 	116

Date 21/AUG/2024	Author(s) JWB	Page 2/5	Revision 2

				CHANGE LOG
	Date	Revision	Page ref	Change
ľ	17/APR/2023	1	ALL	First release
	21/AUG/2024	2	ALL	Section E5 & E5G removed, E6F added.
ľ				
			100.11.00.01.00.11.00.00.11.00.01.00.01.00.01.00.01.00.01.00.01.00.01.00.01.00.01.00.01.00.01.00.01.00.01.00.0	



Installation, Operation & Service Manual A03

Date 21/AUG/2024 Author(s) JWB Page 3/5 Revision 2

ADMINISTRATIVE DATA CAD assembly dwg no. MA165 A03 Capacity Curves

Standard model numbers	A031009 A031709			
PHYSICAL ATTRIBUTES				
Physical dimensions (mm)	W550 x D540 x 713			
Construction	Sheet steel gauge 1.5mm Epoxy polyester powder coat			
Mounting type	Castors, 2 swivel, 2 braked			
Acceptable environment	Indoors or outdoors sheltered			
Weight (kg)	65			
Noise level (dB(A)@1m)	≤65			
Toolless access	No			


A030509

TEMPERATURE CONTROL	ATTRIBUTES
Technology	Air blast
Control method	SA00024 Proportional Fan Speed
Temperature stability	±0.5°C
Cooling capacity (flow 5°K above ambient)	1.5kW
Cooling capacity (flow 10°K above ambient)	3kW
Cooling capacity (flow 20°K above ambient)	6kW
Maximum ambient	+50°C
Design flowrate	5L/min
Maximum THR (Total Heat Rejection)	Applied load, plus power in

WATER CIRCUIT ATTRIBUT	(ES
Max. return line temp	+65°C
System volume (L)	5L
Pump options	
Pressure relief	Spring loaded PRV
Standard fittings	1/2" BSPPF
Standard chem. compat.	Tap water, water-glycol mix

ELECTRICAL ATTRIBUTES 9-spec 4A (208-230Vac 1~/2~ 50/60Hz)

SAFETY INTERLOCKS, STA	ANDARDS & INDICATORS
Physical interface	On/off via MCB rocker switch PID controller display
Cooling system	Single 300mm axial fan PED-compliant coils
Water system	Fluid level switch Pump motor UL-approved Pump motor thermal overload
Fusing and circuit breaking	Miniature circuit breaker
Overcurrent fault-cleared restart mode	Manual restart
Interlock-restored restart mode	Automatic
Emergency off	Not present
Approvals	CE

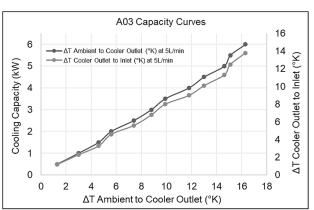





Installation, Operation & Service Manual **A03**


		DO	CUMENT DETAILS
Date 21/AUG/2024	Author(s) JWB	Page 4/5	Revision 2


SAFETY NOTICES

For your safety, we draw your attention to the following warning and caution marks throughout the manual. Warning symbols can be found on the unit. Ensure you have read through all warnings before starting the unit. The safe operation of ATC products always remains the responsibility of the operator. This equipment is intended to be used as a liquid temperature conditioning device – it requires no external pump, nor any further manipulation of temperature. If the equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired. Failure to comply with a 'warning' may result in personal injury or death. ATC does not accept any liability for injury caused through use of this equipment.









Warning; Water pressures of up to 10 bar during operation.

Warning; Water and electricity near one another. Always ensure the unit is isolated before service. The product is protected from overcurrent by MCB (miniature circuit breaker). Never bypass this component.

During fault diagnostics and maintenance, it may be necessary to remove panels, which expose the operator to the dangers of pressurized systems, hot or cold pipes and electrical circuits. Only qualified personnel who are aware and equipped to deal with these systems should only carry out such work.

Any temporary electrical supply to the chiller should be correctly earthed and connected through an earth leakage trip.

In case of unexpected coolant leakage, safety glasses should always be worn when the chiller is operated with the covers removed.

Under no circumstances leave the cooler unattended with the side panels removed.

Never alter settings of pressure switches, overloads, circuit breakers or any safety device without first consulting Applied Thermal Control.



Installation, Operation & Service Manual A03

CUMENT DETAIL					
Revision 2	Page 5/5	В	Author(s) JWB	21/AUG/2024	Date
CLUDED ANNEXE				ific to also is all reveal)
	annexes.	provided in the following serie	luct information is pro	anc technical produ	Specific
	'S	ng - Weighing over 60kg, on ca	pping & Unpacking -	ex A-5 210226 Ship	Annex
		al Requirements for A-Series	e & Environmental Re	ex B-2 210303 Site	Annex
		c air-cooled with half inch fitting	tallation - Generic air	ex C-6 210302 Inst	Annex
		rtup procedures - Generic	id handling & startup	x D-3 201007 Flui	Annex
) input	ries with continuous fan and P	31 Program A-Series	x E-6F 221214 Z3	Annex
		rete PRV	pump using discrete	ex F-3 201007 PD	Annex
11888 8 8 8 8 8 8 8 8 8 8 8 8 8 8 8 8 8		Generic initial for A-Series	roubleshooting - Gen	x G-10 210302 Tr	Annex
		nce - air-cooled units with water			
	units	nicians - Generic non-refrigera			
	***************************************	ent - Conflict Minerals			
	***************************************			ex J-6 210212 EU	
	***************************************		mpliance Statement -		
			mpliance Statement -		
			ompliance Statement		
			andard warranty terms		
			A00012 Volt Free Co		
	3 S	rtional fan speed control for A-S			
			commended spares,		
		wswitch 2-7Lmin 61-348		ex N-2 210301 var ex R-3 200203 SD	
			O DEXIO A4 VO.3	x n-3 200203 SD	Aillex



Operating Manual; Shipping & Unpacking

Annex A-5

DOCUMENT DETAILS

Author(s) MJH Date 1/MAR/2021 Page 1/1 Revision

UNPACKING UNITS WEIGHING OVER 60kg (133lbs) ON CASTORS

Please check that both the packaging and the unit are undamaged. If there is any doubt, it is vital that you inform both ATC and the carrier. There are no hidden shipping bolts or other fixings. You should inspect the packaging for signs of transit damage before signing for the unit, and if possible, unpack the unit before signing. Once you have signed for the goods, ATC cannot be held responsible for any transit damage subsequently found.

As the unit weighs >60kg, ATC recommends it should be lifted with slings through the underside, using a forklift or overhead crane. ATC highly recommends that it is not manually lifted, and that safe slinging and lifting practices are adhered to.

Remove the unit from its original packaging and ensure that there is no packaging left around the cooling ducts. There is no internal product packaging that requires the chiller to be opened.

Please retain all packaging in the unlikely event that the chiller needs to be returned to our local representatives.



7

Applied Thermal Control Ltd 39 Hayhill Industrial Estate Barrow-upon-Soar, Loughborough LE12 8LD, United Kingdom +44 (0) 1530 839 998 Service@thermalexchange.co.uk Support@app-therm.com

Operating Manual; Site & Environmental Requirements

Annex B-2

DOCUMENT DETAILS

Doc. Date 11/MAR/2022 Author(s) MJH Page 1/1 Revision 3

SITE & ENVIRONMENTAL REQUIREMENTS FOR A01, A03, A08 & A12-SERIES

This guide applies to certain A-Series products only. Please find below the requirements for all services and conditions necessary for years of trouble-free running. If you require more detail, please contact ATC for support on sales@app-therm.com or using the contact information at the top of this page.

	GUIDANCE
1	Storage temperature range. Without process fluids, -20°C to +70°C.
2	Storage humidity range. Non-condensing, relative humidity 5% to 95%. Before starting product, allow product to acclimate for 24h in location of use when storing outside <i>operating</i> humidity range.
3	Operating temperature range. With appropriate process fluids, -20°C to +65°C.
4	Operating humidity range. 80% for ambient temperatures up to +31°C (+88°F), decreasing linearly to 50% relative humidity at +40°C (+104°F) ambient temperature.
5	Hard, level surface. A level surface is important for ensuring proper filling and allowing air to escape.

	Model	Electrical	Voltage range	Voltage tolerance	Current	Frequency	Supply
	A01	-Uspec	100-240Vac	±10%	1-0.5A (L-N)	50/60Hz	L/N/E or L1/L2/E
	A03	-9spec	208-230Vac	±10%	4A (L-N	50/60Hz	L/N/E or L1/L2/E
	A08	-3spec	400Vac	±5%	5.2A (L-L)	50/60Hz	L1/L2/L3/N/E
6	A08	-8spec	208Vac	±5%	TBC	60Hz	L1/L2/L3/E
	A08	-9spec	208-230Vac	±10%	5A (L-N)	50/60Hz	L/N/E or L1/L2/E
	A12	-3spec	400Vac	±5%	6.9A (L-L)	50/60Hz	L1/L2/L3/N/E
	A12	-8spec	208Vac	±5%	TBC	60Hz	L1/L2/L3/E
	A12	-9spec	208-230Vac	±10%	TBC	50/60Hz	L/N/E or L1/L2/E

Clearance. Clearance is required to:

- a) Ensure the on/off switch on the front face is unobstructed to allow access in case of emergency.
- b) Fit hoses and electrical supply to the rear of the unit allowing recommended bending radii.
- c) Allow maintenance access points on top and side panels to be removed.
- d) Allow process to take place A01/A03 air-on face is the front of unit 0.5m is recommended the coolest, cleanest air that can be provided will improve performance. A08/A12 air-on face is the right hand side. Air-off faces are every other vented face 0.5m clearance is recommended on at least 1, preferably 2 of the rear, left and right sides.
- **Plumbing.** Tubing, piping or hose must be clean and compatible with the fluid to be used. The product is compatible with deionized water, tap water and water-glycol mixtures such as Hexid A4 and A6. Ensure the connected pipework is suitable for handling up to 20L/min at system pressure ≥6bar.
- **9 Indoor use only.** Altitude up to 2000m above sea level. Ensure the unit has adequate ventilation.
- Installation category. Transient overvoltage category II; Pollution degree 2. Temporary overvoltages occurring on mains supply are acceptable within limits defined in the categories.
- Caution; Always use ATC recommended fluids in our products many sealing compounds and materials are present and unapproved fluids have the potential to corrode your application and damage seals.
- Caution; Do not use inadequately rated wiring. Consult an electrician if you are unsure.
- Caution; The safety of any system incorporating the equipment is the responsibility of the assembler of the system.
- Caution; Do not replace detachable mains cords with inadequately rated cords. Contact ATC for appropriately rated products.



Operating Manual; Installation

Annex C-6

DOCUMENT DETAILS

Author(s) MJH Revision 2 Date 9/MAR/2022 Page 1/2

INSTALLATION FOR AIR-COOLED UNITS WITH 1/2" BSPPF FITTINGS

This guide applies to the following product groups;

- K-Series, R-Series and G-Series refrigerated units, where heatload is rejected to air.
- A-Series airblast units, where heatload is rejected to air.

HOSE RECOMMENDATIONS

Having ensured that your installation meets all site requirements, it is best practice that the fluid lines between your application and the chiller have the following characteristics.

- **Short in length** this reduces friction-based pressure drop and addition ambient heat load.
- 2 **Large diameter bore** – at least 12mm (1/2").
- Free from 90° bends to limit the effects of water hammer. If this cannot be avoided, sharp changes of 3 direction should be minimized so far as possible. Doing this correctly can yield higher pump performance and extend time between maintenance intervals. It will also reduce electrical energy consumption.
- Clean If your installation is to existing pipe work, it is good practice to flush the system with either a commercially available central heating cleaner or 5% acetic acid solution. The system should be flushed clean with tap water to remove all traces of cleaner prior to filling the system. Failing this, it is recommended 4 to use a domestic bleach in solution with tap water, diluted to the point where the bleach can longer be smelled by human nose.
- Opaque, ideally black to inhibit light passing through the tube and algae building up. Alternatively, solid 5 ABS or copper pipe can be used where application chemistry allows.
- Insulation, where low temperature process is planned the process line from chiller to application contains the feed of low temperature fluid. Insulation prevents heat from entering this line and can promote 6 better stability. Uninsulated return lines are helpful where free cooling can be obtained by allowing heat to transfer to air – likewise, insulating the return line is helpful if the fluid temperature is below ambient.



3

Caution; Never use transparent tubing. UV light will pass through, prompting growth of organic contamination.

CONNECTING ADPATERS TO PRODUCT BULKHEAD FITTINGS Standard units are supplied with 1/2" British Standard Pipe Parallel Female (BSPPF) threads (also known as G threads (ISO228)) by default. These fittings are not valved and will 'drop' the volume of the system if 1 left open to atmosphere. Ensure the appropriate thread sealants are used in the fitting of adapters to hose. For metallic mating parts, 2 we recommend Loctite 577. For plastic adaptors such as those supplied with the product, we recommend using ~8-12mm wide PTFE tape, wrapped around the male thread before tightening. Ensure that the system is correctly connected. The 'donut' labels around the ports are clearly marked with inlet and outlet symbols and function in both English and French language. Ports marked as outlet means

4 Check all joints are tight and leak free.

fluid leaves the product and must be connected to the process inlet.

Where this product is incorporated into other equipment, it is the responsibility of the assembler to ensure 5 safety.



Operating Manual; Installation

Annex C-6

				DOC	UMENT DETAILS
Date	9/MAR/2022 Author(s)	MJH	Page	2/2	Revision 2
					BACKFILLING
1	In situations where the chille pressure to the water circuit	r is situated physically lower than the applic of the product.	cation be	eing cooled	d, fluid will apply
2	The weakest seal is normally	the tank lid, and this is typically where flui	d will es	cape the u	ınit.
		cated higher or level with the product wate be installed as an optional standard assem		this is not	possible, a non-
4	Please raise any questions v	vith the sales team on sales@app-therm.co	om.		



Operating Manual; Fluid Handling Procedures

Annex D-3

Date 7/OCT/2020 Author(s) LW, MJH Page 1 / 1 Revision 1

FILLING A SYSTEM

- a) Check all application valves are open, including solenoid valves and variable position valves.
 - The product will require an open water circuit to pump into.
 - ii) Any obstructions can increase the time, or entirely prevent the bleeding of air from the system.
- b) Remove the cap from the tank lid on the top of the product.
 - i) Fill the tank to just underneath the bottom of the filling port.
- c) Turn your attention to the main power switch.
 - i) Immediately after toggling this switch assuming that the power cord is connected and turned on at the wall the product will begin to pump water.
 - ii) Leave the product to run until it cuts out on the level switch interlock.
 - iii) Turn the unit off at the mains switch.
 - iv) Fill the tank again to lift the level switches.
 - v) Start the product again until the unit cuts out again.



Caution; Do not run the pump dry. Do not deadhead the pump.

- d) Repeat steps at c) until the chiller tank water level (if visible) doesn't drop, and the chiller doesn't cutout on its level switches.
- e) With the unit now running;
 - i) Leave the cap off the tank for >30mins to allow air to escape, or very loosely screwed on to prevent water splashing out of the tank if the unit has a 'flow through' design.
- f) Check the application and tubing for signs of leaks whilst the chiller is running.
 - i) Replace the tank lid fully when satisfied the system is full and bled of air.

DRAINING A SYSTEM

- a) Isolate the unit. Have a suitable bucket or drain on-hand.
 - i) Remove the tank lid to allow air into the system.
 - ii) Disconnect hoses individually. Be aware hoses as well as the unit are filled with fluid.
 - iii) Consider using the red transport plugs to block product ports to give yourself time to empty hoses before continuing to empty the product.
- b) Local rules affect where fluid can be disposed of.
 - i) Ensure hazardous products do not enter the water course and are reclaimed from the unit for professional disposal.



Operating Manual; Controller Operation

Annex E-6F

DOCUMENT DETAILS

Author(s) PTJ 14/DEC/2022 Page 1/1 Revision 1 Date

AIR-BLAST A-SERIES WITH CONTINUOUS FAN CONTROL & PT100 INPUT

Internal part number

Program purpose

61-578

Manufacturer part number

Z31Y-GSR (12-24Vac/dc Supply Panel Mounted Digital Thermostat, 1 x 16A, 1 x 8A relay output)

- 1) To take a temperature from a connected NTC type probe.
- 2) To open-circuit a secondary output when an absolute high temperature threshold is reached.
- 3) To set the parameters of the controller to within safe working limits.

						MAII	N PROGRAM	
Grou	Group S.		Group i.		Group r.		Group d.	
Setting	Value	Setting	Value	Setting	Value	Setting	Value	
S.LS	4	i.SE	nt	r.d	0	d.dt	no	
S.HS	60	i.uP	C1	r.t1	oF	d.di	oF	
S.SA	1	i.Ft	2.0	r.t2	oF	d.Sd	oF	
SP	20	i.C1	n/a	r.HC	С	d.dE	oF	
SP2	n/a	i.C2	TEST RIG	r.tC	oF	d.tE	8.0	
		i.CU	TEST RIG			d.tS	2.0	
		i.P2	oF			d.dC	rt	
		i.Fi	0			d.dd	50	
		i.ti	oF			d.td	oF	
		i.dS	P2			d.dL	oF	

Group F.		Group P.		Grou	Group A.		ıp o.
Setting	Value	Setting	Value	Setting	Value	Setting	Value
F.tn	5.00	P.P1	oF	A.Ay	1	0.01	oF
F.tF	oF	P.P2	oF	A.HA	50	0.02	AL
F.FL	10.0	P.P3	oF	A.LA	oF	o.bu	oF
F.LF	-99.9	P.od	oF	A.Ad	0	o.Fo	oF
F.dF	1.0			A.At	oF	o.tu	oF
F.FE	oF			A.tA	oF		
F.Fd	oF			A.PA	2.00		
				A.dA	1.00		
				A.oA	3.00		

Group t.				
Setting	Value			
t.UF	oF			
t.Fb	oF			
t.Lo	oF			
t.PP	1400			
t.AS	1			




Operating Manual; Pressure & Flow Adjustment Annex F-3

DOCUMENT DETAILS

Date 7/OCT/2020 Author(s) MJH Page 1/2 Revision 1

POSITIVE DISPLACEMENT PUMPS & DISCRETE PRESSURE RELIEF VALVE

This arrangement comprises a positive displacement pump (most commonly a rotary vane type) with a spring-loaded pressure relief valve to provide better overpressure setting control with minimal flow losses compared to fixed orifice bypasses/reliefs. This annex describes ATC's default settings and how to adjust the system.

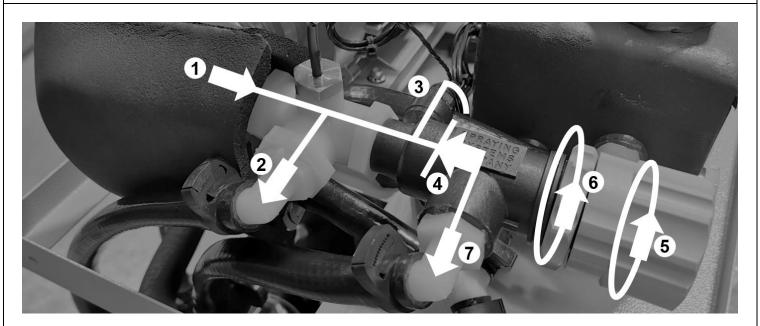

It is important to understand the basic principle that all else being equal, higher flow results in a higher demand for pressure. The motor generates the power required to turn the pump head and create that pressure. The more restrictive a water circuit is, the higher the pressure required to maintain flowrate. Positive displacement pumps are designed to generate high pressure and are mechanically tight - their RPM dictates flowrate. See image;

- 1) Pump discharge fluid leaves the pump head and enters the gauge-tee assembly. It passes the temperature sensor at the tee, and when the pressure relief is inactive, fluid heads towards no. 2.
- 2) Outlet to process fluid heads out of the product to the application. Whatever restrictions lie downstream, fluid leaving this point has not passed through the pressure relief valve.
- **3) Pressure gauge connection** connection to a pressure gauge on the front panel of the product. This displays the pressure in the water circuit, at the pump outlet, not the application which will be lower.
- **4) Pressure Relief Valve (PRV)** spring tension in the body of the PRV determines whether fluid travels through point 2 or passes through to point 7.
- **5) PRV adjustment knob** rotate clockwise to increase maximum delivery pressure. Rotate anti-clockwise to limit maximum delivery pressure.
- **6) PRV adjustment locknut** release this locknut to adjust no.5. Ensure it is tightened once adjustments are made. If it is not, vibration may cause the adjustment knob to move on itself.
- 7) Bypass flow outlet where the pressure requirement to overcome restrictions downstream of no.2 rises to be higher than the setting at no.5, the spring inside no.4 will compress and allow liquid to start bleeding through to no.7. It is important to understand that the nature of the spring means there can be no black and white point for pressure relief setting the spring will slowly compress and bleed flow until all flow passes through no.7. When fully bypassing, all flow stays inside the chiller to protect the application.



7/OCT/2020

Date

Applied Thermal Control Ltd 39 Hayhill Industrial Estate Barrow-upon-Soar, Loughborough LE12 8LD, United Kingdom +44 (0) 1530 839 998 Service@thermalexchange.co.uk Support@app-therm.com

Operating Manual; Pressure & Flow Adjustment

Annex F-3

DOCUMENT DETAILS

Page 2/2 Revision

SETTING THE PRESSURE RELIEF VALVE (BYPASS)

Unless otherwise agreed at point of sale, the default setting for this type of pump and PRV arrangement is 3.33bar (50psi). In the absence of external calibrated pressure gauges, it's possible to use the chiller itself to set this value:

8) Isolate the chiller – always isolate before performing work.

Author(s) MJH

- 9) Disconnect from the application if already connected review the draining procedure in Annex D.
- 10) Connect the chiller's process inlet to process outlet a short run of hose around 1-2m (3-6ft) will be adequate.
- 11) Start the chiller and follow the fill process from Annex D fluid will now be running through a short loop with very low pressure required to overcome the restriction.
- 12) With the chiller running, very slowly kink the short run of hose fitted above this simulates a blocked application – this is known as 'deadheading' the pump. Without PRV, the pump motor would stall or hoses might blow off. Watch the pressure gauge climb as you apply the kink.
- 13) The pressure gauge will eventually stop climbing with the hose fully kinked note the value; this is the setting of the PRV where all flow is bypassed.
- 14) Refer to points 5) and 6) above to adjust if required contact ATC if you're unsure over whether your desired setting is reasonable for the product you have.



Operating Manual; Troubleshooting

Annex G-10

DOCUMENT DETAILS

Date 9/MAR/2022 Autho	r(s) MJH	Р	age 1/1	Revision 1		
	A-SERI	IES GENER	RIC INITIAL I	TROUBLSHOOTING		
SYMPTOM	7.5			POSSIBLE CAUS		
	Check the tank is filled past the level	switch to er	nsure it can r	un.		
	Check temperature of fluid and pump	motor. In t	he case of th	ese reaching		
Linit mat mumina	temperatures that could cause damage	ge, the unit	will switch of	f.		
Unit not running	Check overload state and ensure inte	ernal fuses l	have continui	ity.		
	Check pump motor interlock chain.					
	Check supply is at correct voltage.					
	Air in the system the has not purged	causing pur	mp vanes to	rattle (where fitted).		
Noisy operation	Bearing failure in fan or pump motor o	causes grin	ding / intermi	ittent knocking noise		
	Fan blade is running off center and gr	rinding agai	inst coil hous	ing.		
Fluid lines becoming fouled /	Not using opaque tubing can lead to	UV light pas	ssing through	n the tubing,		
Fluid lines becoming fouled / containing biological matter	prompting growth of organisms.					
containing biological matter	Not following maintenance schedule for cleaning/flushing.					
	Fluid may be incompatible with the materials used in chiller construction.					
	Contact ATC to ensure the fluid is compatible.					
	Rapid changes in system temperature can cause some materials to change					
Fluid seen leaking from	shape at a faster rate than others and open leak paths. Contact ATC to discuss					
system	alternative materials and parts in water circuit construction if your temperature					
	range goes beyond the standard for this product range.					
	In case of centrifugal pump being fitted, minimum head of 2bar has not been observed.					
	Excess application thermal heat load.					
	See Annex G-2 for a description on how to calculate this.					
Poor cooling capacity	Ambient air temperature has increased from nominal requirement, or flow has reduced from cooling fan.					
(undercooling)	Process fluid pump high flowrate can	yield a low	delta T, i.e.	outlet temperature t		
	application will be higher than desired					
	nominal. Cooling capacity will be the	same.				
	Reduction in flowrate in an airblast sy	ystem witho	ut process te	emperature control		
	can yield outlet temperature much clo	oser to amb	ient (lower) tl	han system design		
Evenes applies conscitu	nominals. For nominals, please conta	act sales@a	app-therm.co	m.		
Excess cooling capacity (overcooling)	One or more component in failure mo cooler can reject.	ode generat	ing heat beyo	ond that which the		
	Cooler oversized at point of design or	r thermal loa	ad overestim	ated – this can be		
	remedied by blocking part of the cool					



Operating Manual; Maintenance for End-Users

Annex H-1

NT DETAILS	DOCUMENT

Date November 2019

Compiled by MJH

Revision 1

PERIODIC MAINTENANCE REQUIREMENTS BY END USER

	_	
_		_
		-
		-
•		_
•		_
•)	_

Caution; Failure to carry out service at the specified intervals may permanently damage your equipment.

Print this sheet out and display close to the chiller to maximize the visibility of maintenance requirements.

Weekly	Week 1	Week 2	Week 3	Week 4
Check fluid level – top up as required.				

Monthly	J	F	M	A	M	J	J	A	S	0	N	D
Check the condenser is free from dust or accumulation of debris.												

Annually	Y1	Y2	Y3	Y4	Y5	Y6	Y7	Y8
Drain process fluid and replace with fresh fluid.								
Check for fluid leaks throughout chiller and application.								
Clear any debris from inside the chiller.								

A vacuum cleaner is recommended for cleaning out the condenser, while soft cloths and IPA are recommended for cleaning metallic surfaces. If any spillages have occurred, best practice is to allow the water to evaporate off and wipe up remaining glycol residue with a cloth. Always clean with power supply isolated.



Caution; Never blow out the condenser with compressed air.



Caution; If the mains lead is lost or damaged, contact ATC who will be able to supply a replacement of the correct specification.



7

Applied Thermal Control Ltd 39 Hayhill Industrial Estate Barrow-upon-Soar, Loughborough LE12 8LD, United Kingdom +44 (0) 1530 839 998 Service@thermalexchange.co.uk Support@app-therm.com

Operating Manual; Maintenance for Technicians Annex I-5

DOCUMENT DETAILS

Date 2/MAR/2021 Author(s) MJH Page 1/1 Revision 2

MAINTENANCE FOR TECHNICIANS; GENERIC NON-REFRIGERATED UNITS

belov	guide may apply to your product if you have an X-Series (X, XF, XR) or A-Series product. The guidance w is designed to be non-specific and to raise awareness of potential dangers for a trained engineer carrying service work.					
	GUIDANCE					
A	Warning; during operation component temperatures can exceed +70°C, take care when opening unit.					
A	Warning; After switching off, the cooling fan blades continue to rotate (A-Series only). Do not attempt servicing whilst the blades are rotating.					
Δ	Warning; All products contain water and electricity in close proximity. Ensure the unit is isolated before service. Never bypass overcurrent protection on the mains supply. Never bypass fuses or circuit breakers.					
1	Following service or repair by a trained technician, ensure any electrical connections that may have been disturbed are given the 'tug-test'.					
2	Ensure earth bonding conductors are re-attached.					
3	Ensure the correct fuses are in place.					
4	Ensure the mains cord being used is to specification and is free from damage.					
5	Subject the unit to a PAT test to ensure the unit is safe before running.					
6	Ensure there are no leaks inside or outside the unit.					

Using the wiring schematic for guidance, simulate faults to check each interlock's function.



Operating Manual; Declarations & Approvals

Annex J-5

Date 03/FEB/2021 Author(s) MJH Page 1/1 Revision 01

CONFLICT MINERALS COMPLIANCE STATEMENT

Applied Thermal Control (ATC) adheres to and embraces the ethical values that support our everyday activities. As an expression of these principles and ethical values, ATC adheres to the principle of responsible sourcing of components containing precious and non-precious metals and metal salts in compliance with applicable laws and regulations.

The metals considered are Tantalum (Ta), Tungsten (W), Tin (Sn) and Gold (Au). ATC actively sources components from suppliers known to be reputable and could demonstrate compliance upon request with the Conflict Minerals acts and guidelines.

ATC uses Gold and Tin in electrical components, on PCBs and in rotating machinery, as governed by technical requirements of products. These metals could potentially originate from conflict mineral sites. As many of our suppliers do not purchase these metals direct from smelters, both they and ATC must rely heavily on information that will be provided by their suppliers to determine the source and chain of the metals in those products.

ATC is committed to working with its customers and supply chain to meet the customer's specification and requirements with regards to traceability, sourcing requirements and restrictions. ATC commits that, to the best of our knowledge, our suppliers are complying with the conflict minerals act as stated in their documentation. These statements are reviewed, and updates obtained as required.

Robert Poniatowski, CEO Signed in Barrow-upon-Soar, UK, date 03/FEB/2021



Operating Manual; Declarations & Approvals

Annex J-6

DOCUMENT DETAILS

Date 6/APR/2022 Author(s) MJH Page 1 / 1 Revision 1

EU DECLARATION OF CONFORMITY

Document layout; Governed by Machinery Directive 2006/42/EC, Annex II.

REGISTERED BUSINESS ADDRESS

Applied Thermal Control Ltd, 39 Hayhill Industrial Estate, Barrow-upon-Soar, Loughborough, LE12 8LD, UK.

AUTHORISATION TO COMPILE THE TECHNICAL FILE

Mitchell Howard, address as above

DESCRIPTION & IDENTIFICATION OF MACHINERY

	BESSKII TISK & IBEKTII ISATISK SI MASIMEKT
Generic denomination;	A-Series
Function;	Recirculating airblast cooler
Model;	All with 'A' prefix.
Type;	Air-cooled heat exchanger
Serial number;	
Commercial name;	As above.

NOTIFIED BODY

Not applicable

QUALITY ASSURANCE SYSTEM

QMS International Ltd, Muspole Court, Muspole Street, Norwich, NR3 1DJ, UK. ASCB Registered; 201409-2

DECLARATION

Applied Thermal Control declares that the machinery described above fulfils all the relevant provisions of the directives and standards below.

Directive	Harmonised Standards applied
Machinery Directive 2006/42/EC (inclusive Low Voltage Directive 2014/35/EU)	EN ISO 12100:2010 (MD) BS EN 61010-1:2010+A1:2019 (LVD)
EMC Directive 2014/30/EU	IEC 61000-6-2:2005 IEC 61000-6-4:2006 +A1:2011
RoHS Directive 2011/65/EU (RoHS 2) RoHS Directive (EU) 2015/863 (RoHS 3)	EN IEC 63000:2018
Pressure Equipment Directive (2014/68/EC)	Out of Scope. Sound Engineering Practice (SEP) applied.

PERSON EMPOWERED TO DRAW UP DECLARATION

Robert Poniatowski, CEO

Signed in Barrow-upon-Soar, UK, date 6/APR/2022



Operating Manual; Declarations & Approvals

Annex J-7

DOCUMENT DETAILS

Date 13/FEB/2024 Author(s) MJH Page 1 / 1 Revision 03

WHAT IS THE REACH REGULATION 1907/2006?

REACH is a regulation of the European Union, adopted to improve the protection of human health and the environment from the risks that can be posed by chemicals, while enhancing the competitiveness of the EU chemicals industry. REACH places the burden of proof on companies. To comply with the regulation, companies must identify and manage the risks linked to the substances they manufacture and market in the EU. They have to demonstrate to ECHA how the substance can be safely used, and they must communicate the risk management measures to the users. If the risks cannot be managed, authorities can restrict the use of substances in different ways. In the long run, the most hazardous substances should be substituted with less dangerous ones. REACH stands for Registration, Evaluation, Authorization and Restriction of Chemicals. It entered into force on 1/JUN/2007.

REACH 'ARTICLE' COMPLIANCE CONSIDERATIONS

REACH ANNEX XVII COMPLIANCE

Substances under Annex XVII are restricted either in full (not to be used at all) or for specific uses (can be used in some uses but cannot be used in identified uses).

Applied Thermal Control has contacted all our suppliers and to the best of our knowledge, none of the articles that we sell intentionally contain any of the Annex XVII substances currently on the candidate list in concentrations of >0.1% by weight.

REACH ANNEX XIV COMPLIANCE

Substances under Annex XIV require authorization to use in the EU after sunset date, require communication to downstream recipients when over threshold (0.1% w/w at article level) and require notification to ECHA when SVHC over threshold and imported over 1000kg annually and use not already registered.

Applied Thermal Control has contacted all our suppliers and to the best of our knowledge, none of the articles that we sell intentionally contain any of the Annex XVII substances currently on the candidate list in concentrations of >0.1% by weight.

SVHC LIST COMPLIANCE

Substances of Very High Concern (SVHC) require communication to downstream recipients when over threshold (0.1% w/w at the article level), notification to the European Chemicals Agency (ECHA) when SVHC over threshold and when imported over 1000kg annually and use not already registered.

Applied Thermal Control has contacted all our suppliers and to the best of our knowledge, none of the articles that we sell intentionally contain any of the Annex XVII substances currently on the candidate list in concentrations of >0.1% by weight.

DECLARATION

Robert Poniatowski

Signed in Barrow-Upon-Soar, UK, dated 13/FEB/2024



Operating Manual; Declarations & Approvals

Annex J-8

DOCUMENT DETAILS

Date 03/FEB/2021 Author(s) MJH Page 1 / 1 Revision 01

WHAT IS THE POPs REGULATION 2019/1021?

POPs stands for persistent organic pollutants. In Europe, the global Stockholm Convention is implemented through POPs legislation. POPs are organic substances that persist in the environment, accumulate in living organisms and pose a risk to our health and the environment. They can be transported by air, water or migratory species across international borders, reaching regions where they have never been produced or used. International risk management is necessary as no region can manage the risks posed by these substances alone.

The European Parliament (and Council) issued regulation 2019/1021 on 20/JUN/2019, and further amended (regulation 2020/784) on 8/APR/2020.

POPs LISTED UNDER INITIAL REGULATION 2019/1021

Pesticides:

Aldrin, Chlordane, DDT, Dieldrin, Endrin, Heptachlor, Hexachlorobenzene, Mirex, Toxaphene.

Industrial Chemicals;

Hexachlorobenzene, Polychlorinated Biphenyls (PCBs).

Industrial Chemical Byproducts;

Hexachlorobenzene byproducts;

Polychlorinated dibenzo-p-dioxins and polychlorinated dibenzofurans (PCDD/PCDF), and PCBs.

POPs LISTED UNDER AMENDMENT 2020/784

Perfluorooctanoic acid (PFOA), its salts and PFOA-related compounds.

POPS COMPLIANCE STATEMENT

We certify that to the best of our knowledge, based upon up-to-date information from our suppliers, all products supplied by Applied Thermal Control are fully POPs compliant in accordance with regulations and amendments above mentioned.

DECLARATION

Robert Poniatowski, CEO Signed in Barrow-upon-Soar, UK, date 03/FEB/2021



Operating Manual; Declarations & Approvals

Annex J-10

DOCUMENT DETAILS

Date 03/FEB/2021 Author(s) MJH Page 1 / 1 Revision 02

WHAT IS THE ROHS DIRECTIVE?

The RoHS Directive places restrictions on the use of certain hazardous substances in electrical and electronic equipment (EEE). RoHS compliance has been required for many years, however in 2014 it became a mandatory requirement under CE Marking. ATC products do not clearly fall within any of the existing categories of equipment, but as of 23/JUL/2019, all EEE not covered falls within scope of the directive. In contrast to RoHS 1, RoHS 2 is a CE marking Directive, and requires, for finished EEE, the use of the CE mark on the product to show compliance. The responsibility for affixing the CE mark resides with the manufacturer.

RoHS 1 2002/95/EC

Adopted in February 2003 by the EU and taking effect on 1/JUL/2006, RoHS 1 restricted the use of 6 hazardous materials;

- 1) Lead (Pb)
- 2) Mercury (Hg)
- 3) Cadmium (Cd)
- 4) Hexavalent Chromium (Cr6+)
- 5) Polybrominated Biphenyls (PBB)
- 6) Polybrominated Diphenyl Ether (PBDE)

We certify that to the best of our knowledge, based upon up-to-date information from our suppliers, all products supplied by Applied Thermal Control are fully RoHS 1 compliant.

RoHS 2 2011/65/EU

Adopted in July 2011 by the EU and taking effect on 2/JAN/2013, RoHS 2 expands the scope of RoHS 1 by adding new categories. RoHS 2 compliance is required to CE mark the product. Compliance with RoHS 2 is mandatory from 22/JUL/2019.

We certify that to the best of our knowledge, based upon up-to-date information from our suppliers, all products supplied by Applied Thermal Control are fully RoHS 2 compliant.

RoHS 3 2015/863/EU

Adopted in 2015 by the EU and taking effect from 22/JUL/2019, RoHS 3 adds four additional substances to RoHS 1's list.

- 1) Bis(2-Ethylhexyl) phthalate (DEHP): < 1000 ppm
- 2) Benzyl butyl phthalate (BBP): < 1000 ppm
- 3) Dibutyl phthalate (DBP): < 1000 ppm
- 4) Di-isobutyl phthalate (DIBP): < 1000 ppm

We certify that to the best of our knowledge, based upon up-to-date information from our suppliers, all products supplied by Applied Thermal Control are fully RoHS 3 compliant.

DECLARATION

Robert Poniatowski, CEO Signed in Barrow-upon-Soar, UK, date 03/FEB/2021



Date 30/NOV/2023

Applied Thermal Control Ltd 39 Hayhill Industrial Estate Barrow-upon-Soar, Loughborough LE12 8LD, United Kingdom +44 (0) 1530 839 998 Service@thermalexchange.co.uk Support@app-therm.com

Operating Manual; Warranty Terms

Annex K-1

DOCUMENT DETAILS

Page 1/1

WARRANTY TERMS

Revision 03

Please visit the website warranty registration page to ensure ATC can offer you the best possible support;

https://www.app-therm.com/warranty-registration/

a) For how long is my ATC product warrantied?

Author(s) RW, MJH

ATC provides a comprehensive return to base 2-year parts, 1-year labor warranty from delivery as standard on all new equipment, provided it has been installed and operated in accordance with the manual.

b) Where will ATC fulfill the product warranty?

ATC's standard warranty terms are Return to Base (RTB) – issues with chillers are often easily solvable over the phone or email, or by reviewing ATC's technical guidance on the web and in the product manual. On occasion, at the discretion of ATC, goods may be serviced on site FOC or a service loan unit may be supplied. Warranty cover excludes the cost of travel by engineers and loan unit rental charges. Obtaining onsite service for a product, even in full warranty, is a chargeable service.

- c) Who is liable for shipping charges in the event of warranty failure?
 - During the **first year** of the warranty period, freight costs for shipping to ATC are for the customer's account. Freight costs for shipping from ATC are for ATC's account. During the **second year** of the warranty, freight costs to and from ATC are for the customer's account.
- d) I'm experiencing problems with my chiller. It's within warranty what do I do next? Contact ATC to discuss the issue you are having. The contact details in the header of this document are an ideal place to start. Be sure to have your model number and serial number on-hand to aid those attempting to solve remotely.
- e) Telephone support couldn't fix my chiller what do I do next?

An RMA form must be completed. This allows both the end-user and ATC to clarify your details, to set the party responsible for shipping costs, and to set a different return address if desired. Shipping advice is provided, and the end-user must sign a declaration that states the unit is safe to handle. Return the form by email for fastest response.

- f) What happens if my chiller failed outside warranty or requires non-warranty repair work?

 A purchase order will be requested to cover an initial inspection this will only be invoiced if the inspection shows there is no fault. If packaging is required, i.e. a crate, a separate charge will be levied. If the end user prefers ATC to arrange a collection, a shipping charge may be levied.
- g) Our process must continue running can we have a loan unit whilst our chiller is in repair?

 ATC hold several standard air-cooled chillers at the factory for the sole purpose of offering for loan these are available on a first-come, first-serve basis. Models up-to 3kW capacity are available.
- h) To avoid any delays in remedial actions in the event of a repair it is essential to retain the original packaging. Please note that if the unit is returned for repair without original packaging, a fee may be charged for the provision of replacement packaging.



Operating Manual; Standard Options

Annex L-12

DOCUMENT DETAILS


10/JUN/2022 Author(s) MJH Date Page 1/1 Revision 2

SA00012 VOLT FREE CONTACTS STANDARD OPTION

SA00012 provides access to switches to describe certain system conditions. The switches do not have voltage across them, they are 'volt-free' – the end-user or system builder can apply their own control system voltages. This approach is less complex than communications protocols such as RS485, but more limited in function.


WIRING

Volt-free contacts (sometimes called volt-free switches) are electrical circuits that open or close depending on the state of relays driven by hardware conditions elsewhere in the product. **Temperature** (pins 8&9) is captured from a controller output – this parameter can be easily adjusted, but factory setting is to go open-circuit within +/-10°C of setpoint. Flow (pins 6&9) is captured from either a flow switch or a controller reading pulses from a flow meter. Flow switches may be fixed or adjustable but will always have hysteresis built-in. Flow sensors can have a single switching point. Circuit becomes unmade on low-flow. Level (pins 4&9) is captured from a reed switch in the tank. By default, this signal is open-circuit once the fluid level is too low and the pump has stopped. All-OK (pins 2&9) combines the three signals onto a single pin pairing, sharing the same open-circuit=not OK logic.

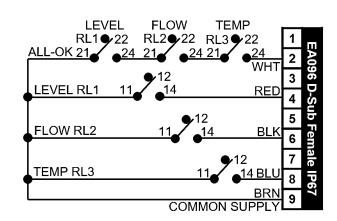

Dependent on your product type, signals will either be accessible via a standard two-row 9-pin D subminiature connector (see below left) OR direct connection to terminal blocks (see below right). Where a D connector is provided, the female gender (ATC PN EA096) is supplied in all cases. If male pins are required, we recommend using a male-to-male gender-changer connector (ATC PN EA853). Pin numbers are clearly marked on the molding. The connector is rated to IP67.



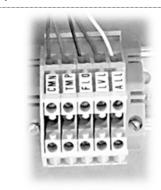

Relays used in this standard option pack have the following ratings:

AC-1 (AC resistive loads)

230Vac@8A (D-connector limited)

3 AC-15 (AC electromagnetic loads) 230Vac@3A (D-connector limited)

DC-13 (DC electromagnetic loads)

24Vdc@2A

1



Operating Manual; Standard Options


Annex L-24E

DOCUMENT DETAILS

Date 1/MAR/2021 Author(s) MJH Page 1 / 1 Revision 1

PROPORTIONAL FAN SPEED CONTROL FOR A-SERIES

This guide may apply to your product if your airblast A-series product was bought with standard option SA00024. Temperature stability is enhanced by regulating the amount of air passing through the heat exchanger. The fan speed is managed by a PID controller, as opposed to continuous running or on-off control.

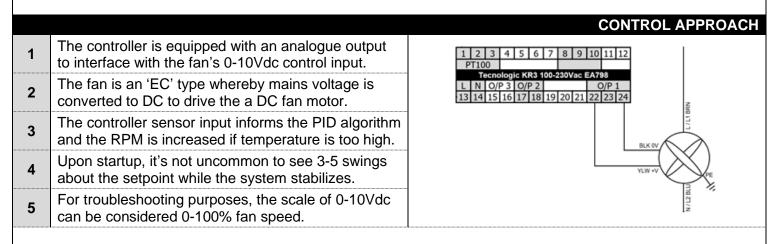

GENERAL REMARKS ON STABILITY

- This approach enables stability of ≤0.5°C around setpoint. The longer the system is allowed to stabilize, the better the stability should become. A stable load and stable ambient are necessary to achieve this value.
- 7 To improve stability, review Annex E documentation for your product to see PID tuning options.



Operating Manual; Recommended Spares

Annex M-7

DOCUMENT DETAILS

Date 9/SEP/2022 Author(s) MJH Page 1/2 Revision 4

RECOMMENDED SPARES FOR A-SERIES

Recommended spares include all rotating machinery (i.e. motors, fans), all sacrificial elements (i.e. fuses) and parts that users interact with (dials, fittings). Pricing is available from sales@app-therm.com.

	A01 (MA485	CHASSIS)
PN	Description	QTY
EA770	Appliance inlet module	1
EA044	CORDSET – UK BS1363 to C13, 2m, right angle head (to suit appliance C14)	1
EA507	FUSE – T5A H250V UL-OK (FS1+2)	2
EA769	FUSE – T4A H250V UL-OK (FS3)	1
EA506	FUSE – T2A H250V UL-OK (FS4)	1
EA815	PSU – universal input, 24VDC 350W output	1
EA781	Level switch	1
EA834	Relay	1
WA696	Pump – PC6 (A01 <i>061</i> U)	1
WA697	Pump – PC3 (A01 <i>032</i> U)	1
RA287	Fan – 172mm axial frame fan 24Vdc	1

	A03 (MA165	CHASSIS)
PN	Description	QTY
EA513	FUSE - T0.5A L250V UL-OK	1
EA626	Circuit Breaker 2 pole 10	1
WA319	Pump head – P10	1
EA517	Pump motor 230V 1/2~ for PD pumps P5 P10 P15	1
RA320	FAN ASSY - 300mm 4pole fixed speed PSC motor (fixed speed models)	1
EA846	FAN ASSY - 300mm 1700RPM EC motor 0-10Vdc (variable speed models)	1
EA586	Sensor PT100B, 1/4" BSP	1
	Controller – KR3 (variable speed models)	1
EA781	Level switch	1

	A08 & A12 STANDARD -0S	PEC & -3SPEC MODELS
PN	Description	QTY
EA643	Overload 4-6.3A	1
EA101	Auxiliary contact	1
EA252	No volt release (undervoltage trip)	1
EA781	Level switch	1
EA517	Pump motor 230V 1/2~ for PD pumps P5 P10 P17	1
EA617	Pump motor 400V 3~ for PD pumps P5 P10 P17	1
WA319	Pump head – P10	1
WA318	Pump head – P17	1
WA781	Pump – Turbine 17L/min@5bar 400V 3~ 50Hz	1
RA116	FAN – EC motor (fixed speed models)	4/6
EA779	Lamp 230Vac 1/2~	1
EA208	Fan – PSC motor, high flow 2pole.	4/6



Operating Manual; Recommended Spares

Annex M-7

			DOC	CUMENT DETAILS
Date 9/SEP/2022	Author(s) MJH	Page	2/2	Revision 4

	A08NS420 ADDITION	AL PARTS
PN	Description	QTY
EA895	Fans – 3~ 400V	1
64-415	Low voltage PSU, input 180-550Vac 1/2~	1
EA816	Control – Z31 24Vdc (for on-off control, OR simple temperature display OR VFCs)	1
EA092	Flow switch	1
EA896	Supply lamp, white, 24Vdc	1
EA834	Relay	3
EA781	Level switch	1
EA812	Contactor 12A/phase 5.5kW 24Vdc coil	1

A40 (MA407 C		A40 (MA407 CHASSIS)
PN	Description	QTY
63-589	PUMP P40	1
WA911	PUMP P80	1
WA884	PUMP P150	1
EA379	Switch-Level 20C to +100C	1
EA643	Overload; 4-6.3A/phase	1
EA793	PSU; 100-240Vac input	1
EA812	Potentiometer	1
EA824	Contactor; 5.5kW 12A	1
EA848	Fuse; F0.5A H250V UL-OK	1
EA942	Fan; Guard mount; non-UL	1
WA308	Pressure gauge w/ clamp	1
60-811/C	Lamp; Round; LED; 22mm	1
63-319/B	Inverter; 1ph - 3ph	1
70-152	Valve; brass; gate	1
61-100/B	Push Button; Body - 1 x N/O contact	1
61-101/B	Push Button; Body - 1 x N/C contact	1
61-102/B	Push Button; Head; 22mm - latching; red	1
61-329	Switch-Rotary; Head 22mm - 2 Position; stay put	1
73-344	Valve; Poly; quarter turn	1



Operating Manual; NS Water Circuit

Annex N-2

DOCUMENT DETAILS

Date 1/MAR/2021 Author(s) MJH Page 1 / 1 Revision 1

NS WATER CIRCUIT; VARIABLE POSITION FLOWSWTICH 2-7L/min 61-348

Where ATC's EA092 standard fixed position flowswitch is not appropriate, the PN 61-348 may be applicable. This sheet highlights how it works, how to adjust and limits on its use. Typical application is similar to EA092 however; a) for low viscosity liquids, b) small switch hysteresis, c) small dimensions. Its advantages lie in the complete stainless steel design, universal mounting position and pressure of up to 350bar and temperatures up to +100°C. These are ideal for monitoring the flow of low viscosity liquids, i.e., in cooling circuits and laser systems, for pump monitoring, compressors and many other applications.



MODE OF OPERATION

- This device operates according to the principle of the variable area flow meter. A float is moved by the flow of the medium and its integrated magnets generate a magnetic field. The position of the float is determined by the switching contact. The float is returned to its initial position by a spring, so that the device can also be operated in other installation positions (i.e. horizontal).
- The devices are calibrated for installation with flow from bottom to top and have their greatest accuracy with vertical installation. Since the weight of the float influences the measurement result, deviations occur in other installation positions.

ADJUSTMENT OF THE SWITCHING POINT

- 3 Loosen the locking screw of the switching contact.
- Move the switching contact until the arrow on the switching contact coincides with the desired switching point. The switching point corresponds to the falling flow rate value where the circuit opens.
- 5 Retighten the locking screw of the switch contact.

ELECTRICAL PROPERTIES

6 This product is rated for maximum of 230Vac and 3A current, although 60VA must not be exceeded.

MAINTENANCE & CARE

- Due to the small number of moving parts, this device requires very little maintenance. However, regular functional checks and maintenance not only increase the service life, but also that of the entire system
 - The maintenance intervals depend on a) contamination of the medium, b) environment conditions (i.e. vibrations). At least the following points must be checked during maintenance;
 - a) Function of the switching contact
 - b) Tightness of the device
 - c) Mobility of the float

8

The float motion and the switching contact function can be checked by changing the flow rate and monitoring the switching state of the switching contact. In most cases, rinsing with a clean medium is sufficient for cleaning. In stubborn cases (i.e. limescale deposits) it can be cleaned with commercially available cleaners, provided these do not attack the materials of the device (full stainless 1.4571)

Issue 6.6, April 2024 Page 1 of 4



Conforming to Directive 1907/2006/EC

SECTION 1: IDENTIFICATION	NOF THE SUBSTANCE/MIXTURE AND O	F THE COMPANY/UNDERTAKING

1.1. Product Name Hexid A4

1.2. Intended/Recommended Use Heat Transfer Fluid

1.3. Manufacturer Applied Thermal Control Limited

39 Hayhill Industrial Estate, Barrow upon Soar, Leicestershire, LE12 8LD. United Kingdom.

www.app-therm.com

1.4. Emergency Telephone Number +44(0)1530 839998
 1.5. Email sales@app-therm.com

SECTION 2: HAZARDS IDENTIFICATION

2.1. Classification of the substance or mixture

The product is not classified as dangerous according to Regulation (EC) No. 1272/2008.

This mixture is not classified as dangerous according to Directive 1999/45/EC.

This mixture has no classification under CLP

2.2. Label elements

Label elements: This product has no label elements

Signal Word: No signal word.

Hazard statements: No known significant effects or critical hazards.

Precautionary statements: Prevention, Response, Storage or Disposal: Not applicable.

2.3. Other hazards

PBT: This product is not identified as a PBT/vPvB substance.

SECTION 3: COMPOSITION/INFORMATION ON INGREDIENTS

3.1. Chemical Nature Water (CAS 7732-18-5), not classified.

Propylene glycol (CAS 57-55-6) (REACH 01-2119456809-23)

(EINECS 200-338-0) not classified.

Fluorescein (trace) and biocide (trace) not classified.

3.2. Food Grade

SECTION 4: FIRST AID MEASURES

	General advise	No special precautions required. Treat symptomatically.
4.1.	Eye Contact	Rinse thoroughly with plenty of water, also under the eyelids. Remove contact lenses after a few minutes and continue rinsing. If symptoms persist, call a physician.
4.2.	Skin Contact	Wash off immediately with plenty of water. If skin irritation persists, call a physician.
4.3.	Inhalation	Remove to fresh air. If symptoms persist, call a physician.
4.4.	Ingestion	Rinse mouth with water. Never give anything by mouth to an unconscious person. If symptoms persist, call a physician.

SECTION 5: FIREFIGHTING MEASURES

5.1. Extinguishing media

Use extinguishing measures that are appropriate to local circumstances and the surrounding environment. Water spray, foam, dry powder or CO2. Alcohol-resistant foam

5.2 Unsuitable extinguishing Media

High volume water jet. Do not use a solid water stream as it may scatter and spread fire.

5.3 Specific hazards during firefighting

In fire conditions, toxic decomposition products may be formed (see also section 10). In combustion, emits fumes, smoke, carbon dioxide (CO2) and carbon monoxide (CO). Heating will cause a pressure rise - with severe risk of bursting and explosion, Violent steam generation or eruption may occur upon application of direct water to hot liquids.

5.4. Advice for firefighters

In the event of fire, wear self-contained breathing apparatus. Wear personal protective equipment. Promptly isolate the scene by removing all persons from the vicinity of the incident if there is a fire. Keep containers cool by spraying with water if exposed to fire. Collect contaminated fire extinguishing water separately. This must not be discharged into drains. Burning fluids may be extinguished by dilution with water

Issue 6.6, April 2024 Page 2 of 4

Conforming to Directive 1907/2006/EC

SECTION 6: ACCIDENTAL RELEASE MEASURES

6.1. Personal precautions

Use personal protective equipment. Avoid contact with skin and eyes. Keep unnecessary and unprotected personnel from entering the area.

6.2. Precaution to protect the environment

Do not flush into surface water or sanitary sewer system. Avoid subsoil penetration.

6.3 Clean-up procedures

Contain the spillage, soak up with non-combustible absorbent material, (e.g. sand, earth, diatomaceous earth, vermiculite) and transfer to a container for disposal according to local / national regulations (see section 13). Keep in suitable, closed containers for disposal. Dike the area of spill to prevent spreading and pump liquid to salvage tank. Treat recovered material as described in section 13 Disposal considerations.

SECTION 7: HANDLING AND STORAGE

7.1. Precautions for safe handling

Keep container tightly closed. Handle in accordance with good industrial hygiene and safety practice. Spills of these organic materials on hot fibrous insulations may lead to lowering of the auto-ignition temperatures possibly resulting in spontaneous combustion.

7.2. Conditions for safe storage

Keep only in the original container.

SECTION 8: EXPOSURE CONTROLS/PERSONAL PROTECTION

8.1. Control parameters

Component: Propane-1,2-diol CAS-No. 57-55-6

Other Occupational Exposure Limit Values EH40 WEL, Time Weighted Average (TWA):, Total vapour and particulates.150 ppm, 474 mg/m3

EH40 WEL, Time Weighted Average (TWA):, Particulate.10 mg/m3

ELV (IE), Time Weighted Average (TWA):, Total vapour and particulates.150 ppm, 470 mg/m3

ELV (IE), Time Weighted Average (TWA):, Particulate.10 mg/m3

8.2. Exposure controls/Appropriate engineering controls

Local exhaust. If this product contains ingredients with exposure limits, use process enclosures, local

exhaust ventilation or other engineering controls to keep worker exposure below any

recommended or statutory limits.

Personal protective equipment

Respiratory protection Suitable respiratory protective device Combination filter: A-P2

Filter Type Combined particulates and organic vapour type

Hand protection Category short time exposure Break through time> 10 min

Protective index Class 1 When prolonged exposure is expected: Break through time> 120 min Class 4 Observe the information of the glove manufacturers on permeability.

Protective gloves should be chosen according to Workplace Safety Assessment. Gloves recommended according to EN 374 (protection against chemicals).

Material Chemical resistant gloves made of butyl rubber or nitrile rubber category III

according to EN 374.

SECTION 9: PHYSICAL AND CHEMICAL PROPERTIES

JECTI	SECTION 7. THIS ICLE AND CHEF HOLE INCHES			
9.1	Appearance at 20°C	Fluorescent green clear liquid		
9.2	Odour	Almost odourless		
9.3	Flash point	Boils without flashing		
9.4	Ignition temperature	Not Available		
9.5	Flammability Limit	Not Available		
9.6	Oxidizing Properties	Not Available		
9.7	Auto flammability	450°C		
9.8	Density at 25°C	~1.036g/cm ³		
9.9	pH (as is)	7		
9.10	Boiling point	102°C		
9.7	Auto flammability	450°C		
9.8	Solubility in water	Miscible		
9.9	Freezing point	-21°C		
9.10	Specific Heat Capacity	3.78kJ/kg °K		

Conforming to Directive 1907/2006/EC

9.11 Viscosity, Kinetic, at 25°C

3.51mPa.s

SECTION 10: STABILITY AND REACTIVITY

10.1. Reactivity

Stable under recommended storage conditions. No dangerous reaction known under conditions of normal use.

10.2. Chemical stability

No decomposition if stored and applied as directed. Stable under recommended storage conditions. Hygroscopic.

10.3. Hazardous reactions

Hazardous polymerisation does not occur.

10.4. Conditions to avoid

Generation of gas from decomposition causes pressure in closed systems. Keep away from direct sunlight. Avoid high temperatures. Avoid temperatures exceeding the decomposition temperature. Avoid UV light.

10.5. Materials to avoid

Strong acids, Strong bases, Strong oxidizing agents.

10.6. Hazardous decomposition products

Aldehydes, Alcohols, Ether, Organic acids.

SECTION 11: TOXICOLOGICAL INFORMATION

11.1. Toxicity Oral

LD50: > 20000 mg/kg (rat) This product can present a small hazard if large quantities are swallowed.

11.2. Inhalation

LC50 : 6.15 mg/l (rat; 4 h; vapour) At ambient temperature the exposure to vapours is minimal due to a low volatility rate. Inhalation may cause irritation to the nose, throat, upper respiratory tract and lungs. No deaths occurred

11.3. Dermal

LD50: > 20000 mg/kg (rabbit) Prolonged skin contact is unlikely to result in absorption of harmful amounts. Skin irritation by prolonged exposure is unlikely. Repeated contact may cause flaking and softening of skin.

11.4. Eyes

Slight irritation is possible. Direct contact with eyes may cause temporary irritation. Corneal injury is unlikely.

11.5. Sensitisation

Patch test on human volunteers did not demonstrate sensitisation properties.

11.6. CMR Carcinogenicity

Animal testing did not show any carcinogenic effects. Information given is based on data obtained from similar substances.

11.7. Mutagenicity

No data available.

11.8. Reproductive toxicity

No data available.

11.9. Specific Target Organ Toxicity

Single exposure no data available. Repeated exposure no data available.

11.10. Other toxic properties

Repeated dose toxicity. In rare cases, repeated excessive exposure to propylene glycol may cause central nervous system effects. Aspiration hazard Due to its physical properties, the substance does probably not pose any aspiration hazard.

11.11. Other relevant toxicity information

Handle in accordance with good industrial hygiene and safety practice.

11.12. Experience with human exposure

Health injuries are not known or expected under normal use.

Conforming to Directive 1907/2006/EC

SECTION 12: ECOLOGICAL INFORMATION

12.1. Acute toxicity

Fish - LC50: 40613 mg/l (Oncorhynchus mykiss; 96 h) (static test)

Daphnia and other aquatic invertebrates - LC50: 18340 mg/l (Ceriodaphnia Dubia (water flea); 48 h) (static test)

Algae - ErC50 : 19000 mg/l (Pseudokirchneriella subcapitata (green algae); 96 h) (Growth inhibition)

Bacteria - NOEC: > 20000 mg/l (Pseudomonas putida; 18 h)Chronic toxicity

Aquatic invertebrates - NOEC: 13020 mg/l (Ceriodaphnia Dubia (water flea); 7 d) (semi-static test)

12.2. Persistence and degradability

Biodegradability 81 % (anaerobic; Exposure Time: 28 d)(OECD 301 F)

Readily biodegradable 96 % (anaerobic; Exposure Time: 64 d)(OECD 306.)

12.3. Bioaccumulative potential

BCF - 0.09 estimated Low bioaccumulative potential

12.4. Mobility

Estimated Koc < 1, indicating very high soil mobility.

12.5. PBT and vPvB assessment

Not a PBT or vPvB substance or mixture

12.6. Other adverse effects

Do not flush into surface water or sanitary sewer system. Avoid subsoil penetration. This substance is not in Annex I of Regulation (EC) 2037/2000 on substances that deplete the ozone layer.

SECTION 13: DISPOSAL CONSIDERATION

13.1. Waste treatment methods

Disposal together with normal waste is not allowed. Special disposal required according to local regulations. Do not let product enter drains. Contact waste disposal services.

13.2. Contaminated packaging

Empty contaminated packaging thoroughly. They can be recycled after thorough and proper cleaning. Packaging that cannot be cleaned are to be disposed of in the same manner as the product.

13.3. European Waste Catalogue Number

No waste code according to the European Waste Catalogue can be assigned for this product, as the intended use dictates the assignment. The waste code is established in consultation with the regional waste disposer.

SECTION 14: TRANSPORT INFORMATION

Not dangerous goods for ADR, RID, IMDG and IATA.

14.1. EEC Regulations

UNNO None Class None Packing Group None

Road & Rail Transport (ADR & RID) None IMDG Not Applicable ICOA None

14.2. Export commodity code

39074000

Classification - Polycarbonates.

14.3. Weight and dimensions

5Kg per 5 litre container. 19x14x29cm.

14.4. Manufactured in the United Kingdom

SECTION 15: REGULATORY INFORMATION

15.1 Classification Not classified as hazardous to users.

15.2. CAS No. 5755615.3. Risk or Safety phrases None15.4. Labelling None

SECTION 16: OTHER INFORMATION

Key literature references and sources for data taken from supplier information and data from the "Database of registered substances" of the European Chemicals Agency (ECHA) were used to create this safety data sheet. Other information - The information provided in this Safety Data Sheet is correct to our knowledge at the date of its revision. The information given only describes the products with regard to safety arrangements and is not to be considered as a warranty or quality specification and does not constitute a legal relationship.

The information contained in this Safety Data Sheet relates only to the specific material designated and may not be valid for such material used in combination with any other material or in any process, unless specified in the text.